




# SPARK BUSINESS GROUP

Email: enquiry@sparkbusinessgroup.com.au Website: sparkhomes.com.au  
Unit 3, 13 McCormack Street, Arndell Park, 2148 NSW  
Telephone: (02) 88074717, (02) 86787856


Sparkhomes.com.au

Joining details for wall to floor flanges. Also applicable for wall to wall flanges.

## Cross section of flange

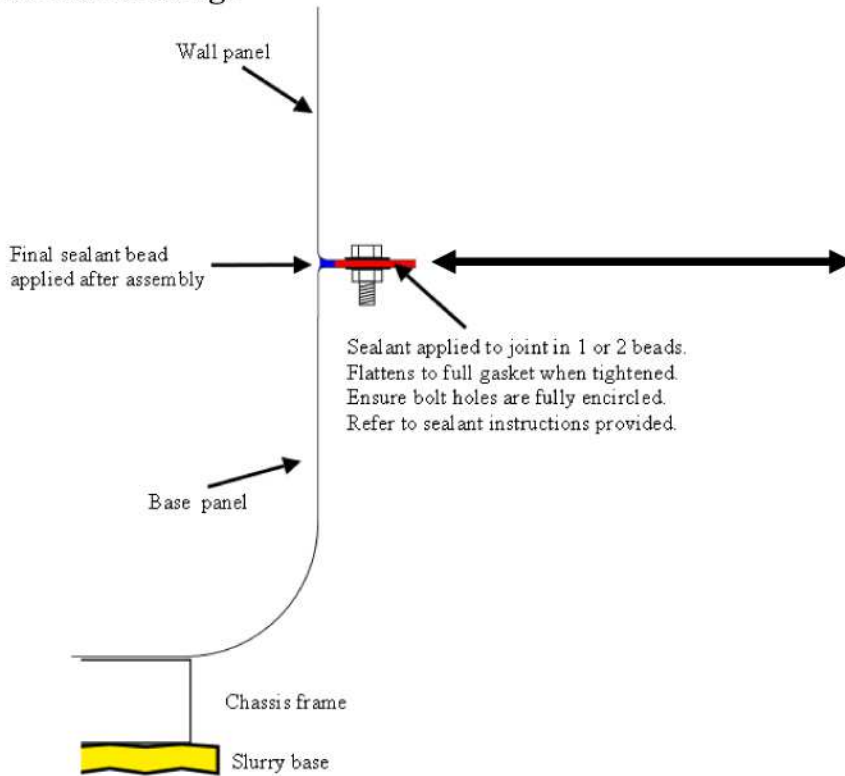

## Top view of flange

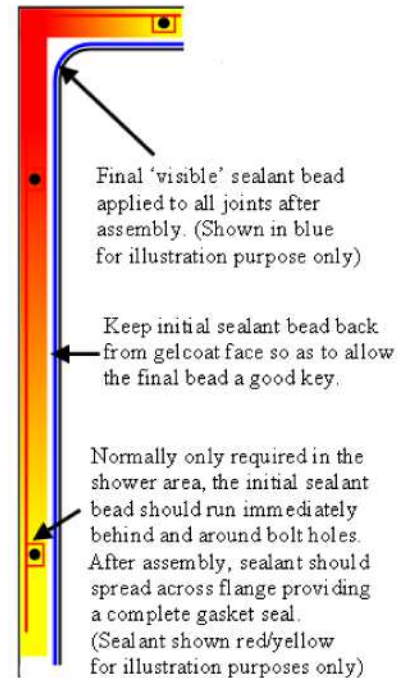

## TYPICAL FLOOR WASTE INSTALLATION INSTRUCTIONS

Apply a continuous bead of sealant to the underside of the top flange of the floor waste. Insert the waste into the recess and fit the rubber washer and rear collar; then fit the back-nut to the thread and firmly hand tighten. Do not over tighten. Sealant must completely fill the void between the bathroom base and the underside of the waste collar. Clean off any internal excess sealant leaving a clean, unbroken surface. Let cure for the recommended time.

